



Hydrolab Minisonde cable to ZENO

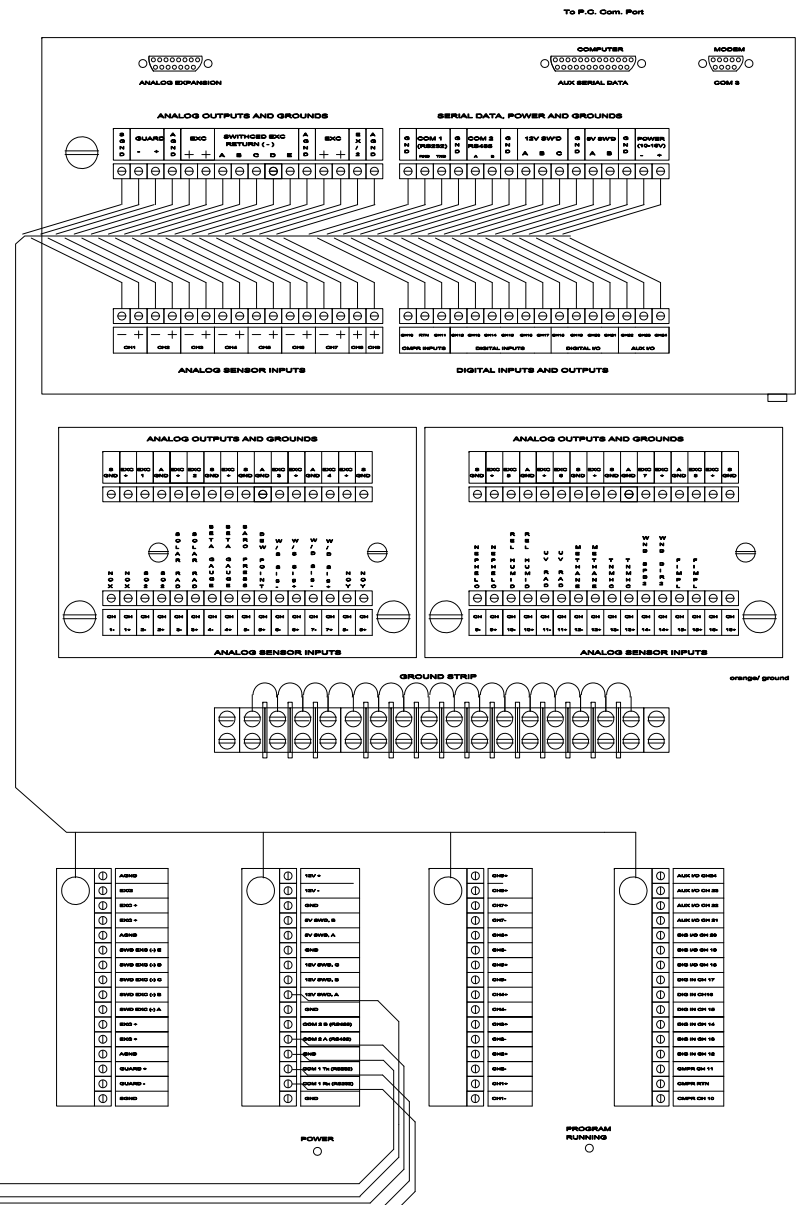

Brown Pin 2 to zeno RXD
Red Pin 3 to zeno TXD
Yellow Pin 5 to GND
Orange Pin 4 to 10-16 Vdc
Violent Pin 8 to Comm 2 A (SDI-12)

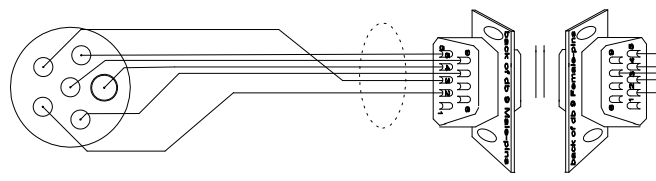

REVIEWED		DATE	TITLE	
DRAWN: Shirkey		04-25-03	Hydrolab Minisonde cable to zeno	
CHECKED:			DWG. NUMBER	
TIME:			SIZE	REV
			A	A
File Name: HYDROLAB_Minisonde_cable3.SKF			SHEET 1 OF 1	
			DATE: 03-21-03	